





訂購代碼 Ordering Code

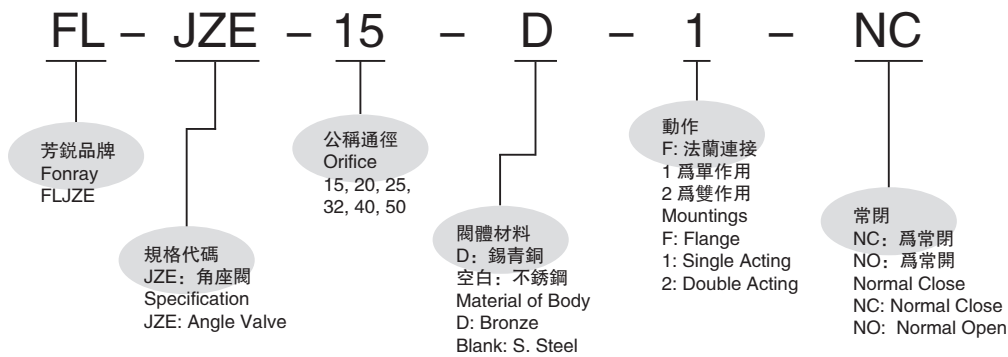

圖形符號 Symbol

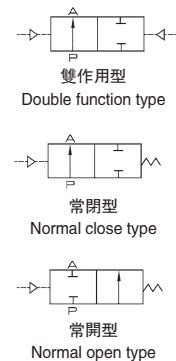

規格 Specification

公稱通徑 Orifice size (mm)	接管螺紋 Port Thread (G)	Kv值 Kv (m³/h)	最大工作壓力 Max. Working Pressure (MPa)	要求最小控制壓力 Required Min. Control Pressure (MPa)	聚酰胺 PA	介質溫度 Medium Tanperature	流向 Direction
15	G1/2"	4.2	0~1.6	0.39	50	-10~+180℃	A向或B向 Direction A or B
20	G3/4"	8	0~1.1	0.39	50		
25	G1"	19	0~1.1	0.42	63		
32	G1 1/4"	27.5	0~1.5	0.5	63		
40	G1 1/2"	42	0~1.25	0.44	63		
50	G2"	55	0~1.0	0.4	80		
65	G2 1/2"	65	0~1.0	0.4	100		

安裝與維修 Fix and Maintain

必須遵守適用的安全規範:

- 管道必須清潔無污染。
- 根據需要安裝，但最好使執行機構朝上。注意流向。
- 連接閥門注意對準管道，祇有在用戶特殊要求時才取下執行機構。
- 打開或維修該角座閥之前先切斷流體和控制氣源并降低管道系統中的壓力。
- Clean the pipes carefully from any residue, dribble or welding residue, to avoid any damage to the seal.
- To be installed as required, preferably with actuator in upright position.
- Connect the pipes according to the reference points (flow direction) found on the valve body.
Only disassemble actuator if required by customer.
- Before taking the valve apart, depressurize the medium supply and piloted air supply from piping system.